

SCHOOL POLICE/SECURITY SYSTEMS



# GE 405 Keyboard

---

Camera programming using 405 keyboard


# GE Camera Guide

---


## Table of Contents

<u>GE Monitor Selection</u>	1
<u>GE Camera Selection</u>	1
<u>GE Rebooting a Camera</u>	2
<u>GE Programming a Tour</u>	3
<u>GE Setting Auto Return To Tour</u>	4
<u>Contact Information</u>	5

# GE Monitor Selection

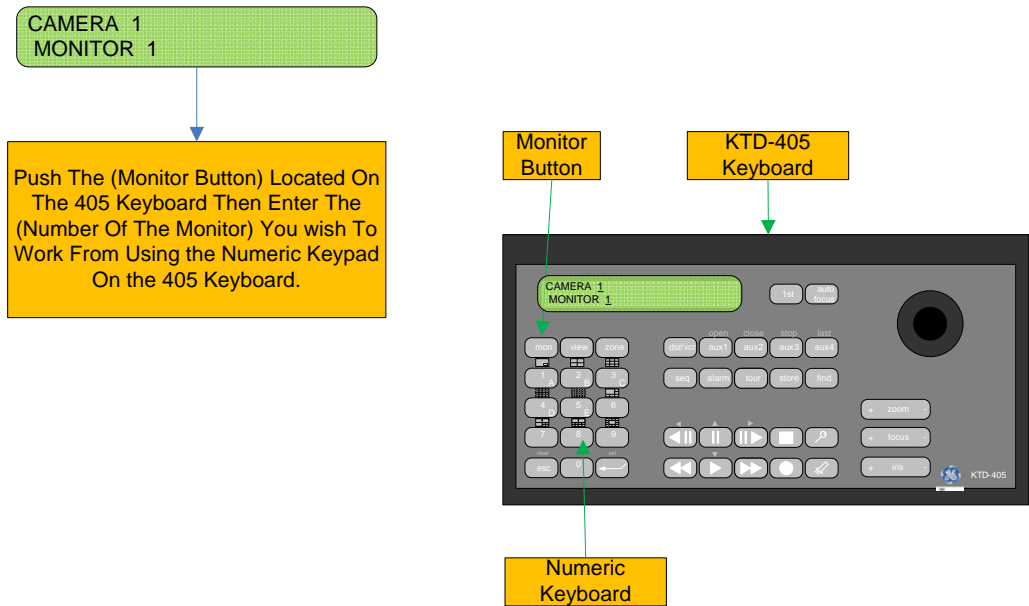

# GE Camera Selection

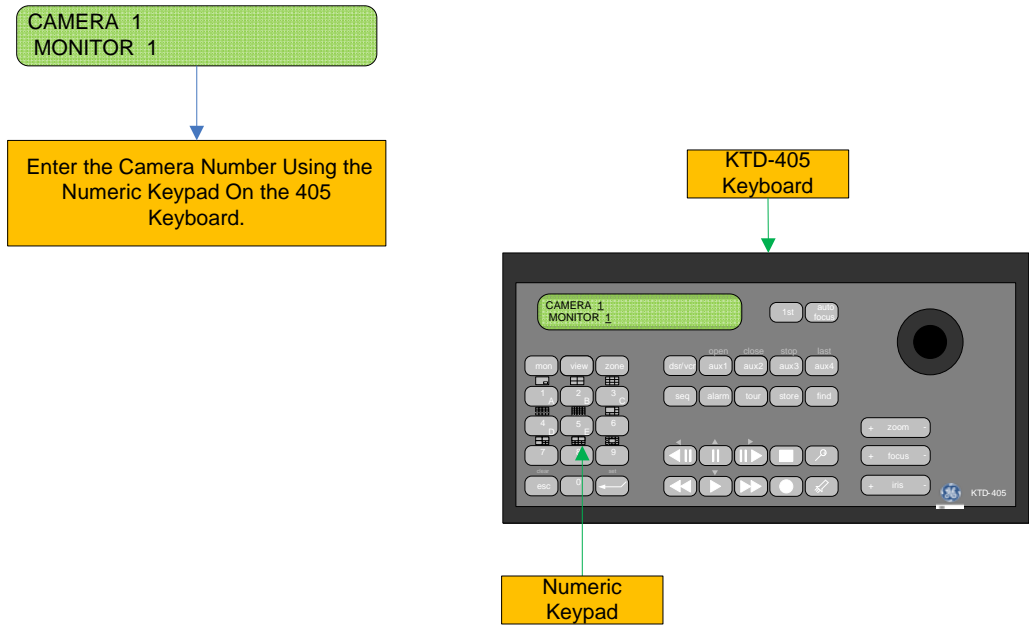

# Rebooting a Camera

CAMERA 1  
MONITOR 1

Push And Hold The (SET) Button Until  
You Hear A Beep.

ENTER PROGRAMMING  
CODE

Quickly Enter 951 Then Push The  
(SEQ) Button One Time.

1=SWITCHER/MPLX 2=ALARMS  
3=CAMERA EXIT ▶▶

Push 3 For Camera Programming.

ENTER CAMERA SITE  
NUMBER \_ \_ \_ ◀◀ BACK

Enter The Camera Number You Wish  
To Program.

SEE MONITOR FOR MENUS  
HOLD SEQ (3 SEC) TO EXIT

Push The (SEQ) Button One Time.  
The Camera Programming Menu Will  
Now Open Up On The Monitor  
Screen. (Fig. 1)

PUSH (1) To Select Setup, This Will  
Open Up  
CLEAR MEMORY Screen. (Fig 2)


PUSH (0) To Select  
CLEAR SETUP

Push (5) For Yes To Confirm Clearing  
Setup Tour. (Fig 3)

Wait 30 Seconds For Setup To  
Completely Clear.




To Continue Programming Turn To  
Page Three

KTD-405  
Keyboard

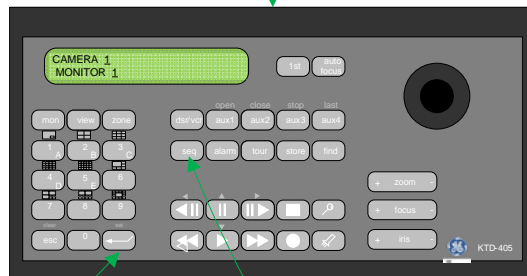

SET

SEQ

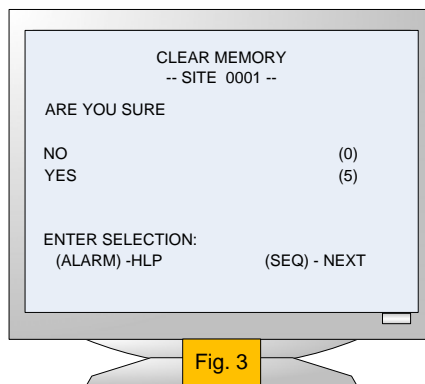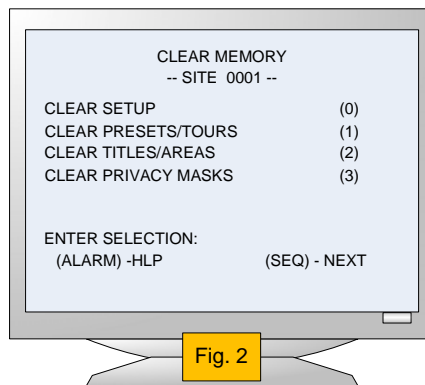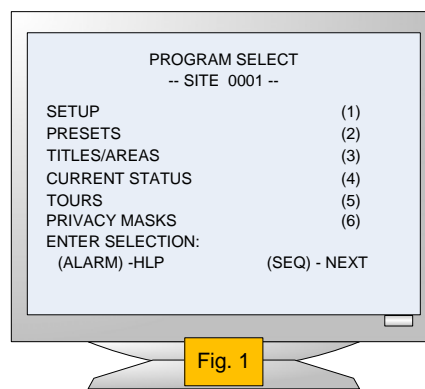

# Setting a Programmed Tour

Push Double Left Arrows Until You See PROGRAM SELECTION SCREEN Once More. (Fig. 4)

You may Now Proceed To Create A shadow Tour

Push (5) To Get To PTZ TOUR PROGRAMMING Screen. (Fig. 5)

Push (1) To Select Shadow Tour Number One.

Push (0) To Select New Tour. (Fig. 6)

Push The (SET) Key To Begin Programming Shadow Tour, Using the Toggle Move the Camera Through The Area You Want to Save As Your New Tour. (Fig. 7) & (Fig. 8)

Push The (SET) Key to End Tour Programming And Record Tour To Memory.

To Continue Programming Turn To Page Four

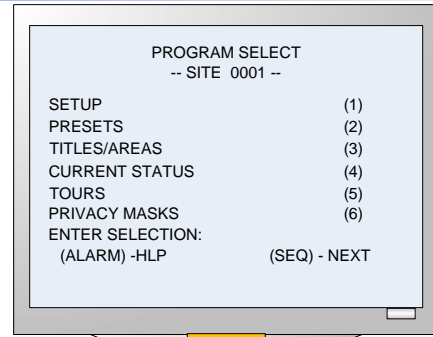


Fig. 4

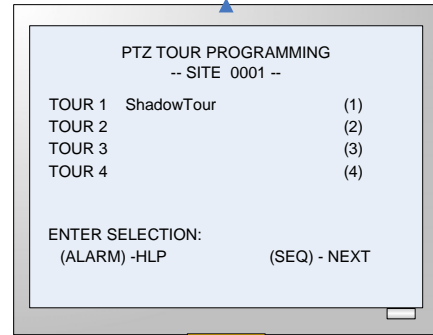


Fig. 5

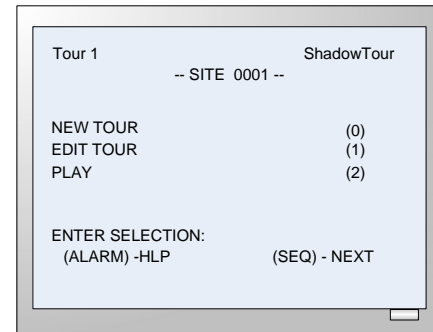


Fig. 6

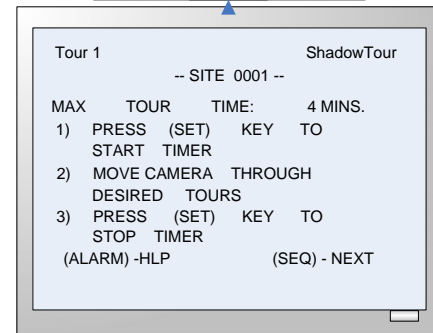


Fig. 7



Fig. 8

# Setting Auto Return Function

Push Double Left arrows on 405 Keyboard 2 times to return to Program Select Screen

PUSH (1) To Select Setup, This Will Open Up CLEAR MEMORY Screen.  
PUSH (SEQ) Two Times To Get To AUTO RETURN Screen. (Fig 10)

PUSH (1) To Select INACTIVITY TOUR, This Will Take You To The TIME BEFORE RETURNING SCREEN.

Toggle UP/ Down On The Joystick To Increase/Decrease Amount Of Time Camera Will Wait Before Returning To Programmed Tour (Fig 11)

To Exit Programming Push And Hold the (SEQ) Key Till It beeps, You Are Now Back To Camera Select Screen On 405 Keypad.

ENTER CAMERA SITE  
NUMBER \_ \_ \_ <<< BACK

If You Wish To Program Another Camera Enter the Camera Number On The 405 Keypad And Repeat Steps from Page 2 Fig. 1.

If Not Push The (Double Back Arrows) One Time Then The (Double Right Arrows) One Time To Exit Programming And Return To Main 405 Keyboard Screen.


ENTER CAMERA SITE  
NUMBER \_ \_ \_ <<< BACK

1=SWITCHER/MPLX 2=ALARMS  
3=CAMERA EXIT >>>

CAMERA 1  
MONITOR 1




Programming Completed

KTD-405  
Keyboard

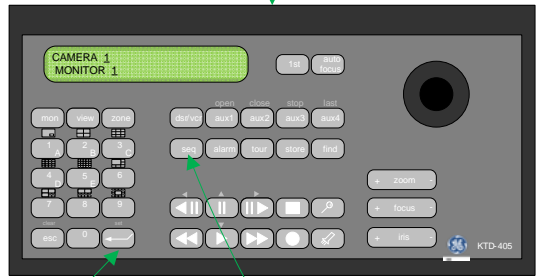

SET

SEQ

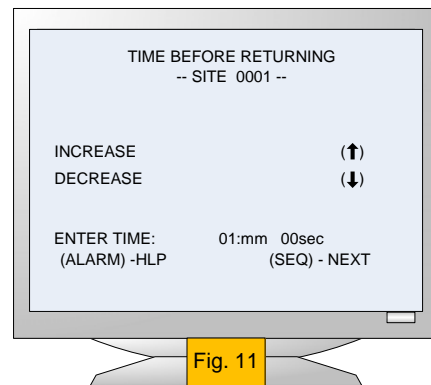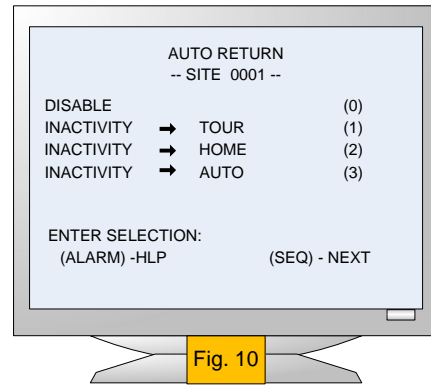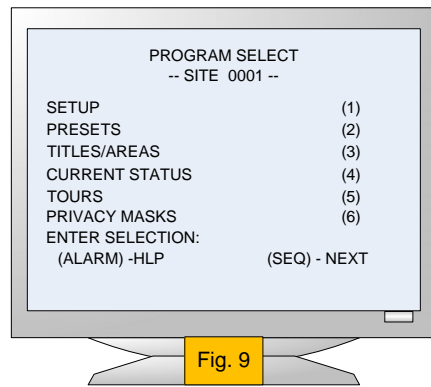

---

## Contact Information



**If you need additional assistance, please  
contact us at:**



**Help Desk: 799-1048**

Or log onto <http://info.securitysystems.ccsd.net> to download clients  
and manuals.

The CCSD Security Systems Help Desk is available Monday through Friday, 7:00 am to 3:30 pm. If you are calling after normal hours, please leave a message and the Help Desk technician get back with you at their earliest convenience.